


Intelligent Toilet
C21295W-3-VP

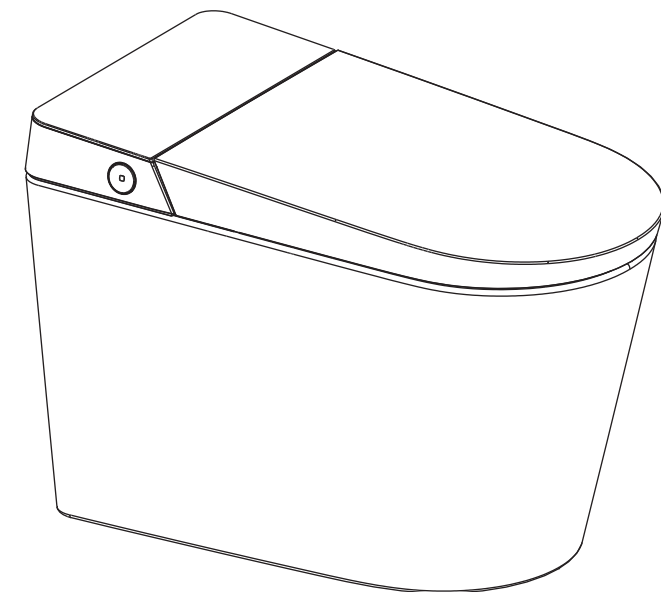

Bravat (China) GmbH

ADR : Address: 21st floor, Poly International Plaza South Tower, No.1 Pazhou Avenue, E., Haizhu District, Guangzhou 510308, P.R.China
(Service Hot Line) : 4007888758



www.bravat.com

ASVFAB0436003A-1.0

- Please read these instructions carefully before begin for properly installation. This instruction contains the product warranty certificate , please keep it properly .

Catalog

Before use

Safety Instructions 3

Function introduction 6

Name of accessories..... 7

How to use

Description of the buttons function..... 8

Remote control illustration..... 9

Auto lid open/close..... 13

Cleaning & Maintenance

Cleaning methods..... 14

Fault diagnosis & Maintenance

Emergency Troubleshooting..... 16

Troubleshooting Guide 18

Technical data..... 19

Installation instruction

Pre-installation confirmation 21

Installation of ceramic toilet 22

Previous preparation 25

- If the picture on the manual does not match the actual product, please refer to the actual product. Products shall be subject to any changes or update without additional notices .

Safety Instructions

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

- 1.The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 2.Children being supervised not to play with the appliance.
- 3.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 4.Children shall not play with the appliance.
- 5.Cleaning and user maintenance shall not be made by children without supervision.

READ ALL INSTRUCTIONS BEFORE USING

 Danger	To reduce the risk of electrocution.
 Warning	To reduce the risk of burns, electrocution, fire, or injury to persons.
 Caution	Indicates that failure to follow the instruction may cause body injury or property damage.
 Danger	Improper use of the grounding plug can result in a risk of electric shock.

 Danger

- 1. Do not use while bathing.
- 2. Do not place or store product where it can fall or be pulled into a tub or sink.
- 3. Do not place in or drop into water or other liquid.
- 4. Do not reach for a product that has fallen into water. Unplug immediately.
- 5. Do not wash the main unit or electrical plug with water or detergent.
- 6. Do not handle the electrical plug with wet hands.
- 7. Do not put a hand or other staff over the outlet of air dryer or block the outlet of air dryer.
- 8. Never disassemble,repair or modify this product.
- 9. During installation, disassembly, repaire and maintenance of the product,the power plug must be switched off and water supply be shut off.

 Warning

- 1. Close supervision is necessary when this product is used by, on, or near children or invalids.
- 2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

Safety Instructions



Warning

3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never use while sleeping or drowsy.
6. Never drop or insert any object into any opening or hose.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Connect this product to a properly grounded outlet only. See Grounding Instructions.
9. Do not throw cigarettes and other burning stuff into toilet, otherwise it might cause fire.
10. This product is electric appliance, so it must be placed far away from water. Please don't drench urine and other liquid to it.
11. Do not lay on side or upside the product during the electrical circuit.
12. It is prohibited to use other electric appliances in the same socket.
13. It is forbidden to use the power extension or unstable loose outlet.
14. The old aging water supply hose can not be used, otherwise it might cause leakage, fire or electrical shock. Installation of the bidet seat should include specified components and new water supply hose.



Caution

1. Do not install or use the product in wet places as steam room etc.
2. It is recommended to use water-proof electrical outlet which should be installed in the place where is not easily got wet.
3. This product should be used with 220V-240V, 50/60Hz electrical current only, load current is at least 10A. Power plug must be equipped with ground fault circuit interrupter or ground fault electrical leakage protector or similar high sensitive, rapid type leakage switch. (Rated sensitive current under 10mA).
4. When it thunders, it is strongly recommended to pull out the power plug.
5. Do not stand on ceramic toilet.
6. Ceramic toilet must install floor fixing bolt.
7. Do not stand on product unit, seat and cover.
8. Do not lean against the seat cover when using the product, to avoid damage.
9. This product is equipped with soft-closing seal cover. Heavy pressing or pushing may damage the soft-closing damper.
10. Do not use lacquer thinner, petrol, liquid medicine, detergent, insecticide, toilet cleanser and scrubbing brush to clean the product.
11. Exposure to direct sunlight is prohibited.
12. Only use tap water or potable water; otherwise it may cause chafing.
13. Do not connect water supply to heater outlet. Make sure inlet water temperature at 3~35 °C / 37.4~95 °F.



Caution

14. When the room temperature is under zero degree, please dry up the water tank, to avoid freezing.
15. Raise rest room temperature to prevent the toilet from damage due to freezing.
16. When move the product from cold or wet environment into normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from electrical short-circuit.
17. When not using the product over three(3) days, drain the water out of the container and pull the electrical plug from the wall outlet.
18. Stop using the product and shut off the power when product malfunctions, please contact the service people for professional service.

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.




Danger

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.


Function introduction

Classification	Function	Specification
Basic function	Rear cleaning	Clean hips function
	Front cleaning	Female cleaning only
	Move cleaning	The nozzle moves forward and back to extend the cleaning scope
	Dryer	Make the hips dry by warm wind
	Water pressure adjust	Adjust water yield and water pressure
	Cleaning position adjust	Adjust the cleaning position
Convenient function	Water temperature adjust	Adjusts the water temperature
	Seat temperature adjust	Adjusts the seat temperature
	Wind temperature adjust	Adjusts the wind temperature
	Controller function	All functions in one controller and convenient to use
	Status display	Shows the intelligent toilet's working status
Shortcut funtion	Auto flush	Flushing automatically after people leave the seat cover
	Flush by controller	Flushing water by controller
	Power saving	Power saving while no usage
Comfort funtion	Warm seat	The seat temperature is adjustable
	Auto lid open / close	Lid can open/close automatically
	Night light	Intelligent, often in the off state, Normally on
	Power off flush	Toilet will washed manually after power failure
	Foot sensing function	Touch the sensing area with your foot to achieve a small flush and opening the seat
Safety Device	Cleaning safety device	Thermal fuse, Water temperature senor, Ground protection, Thermostat, Over temperature protection , Leakage protection plug
	Drying safety device	Thermal fuse, Temperature senor, Thermostat
	Seat safety device	Sensed area, Temperature senor, Thermal fuse, Bimetal thermostat, Leakage protection plug
	Heated burning protection	The seat temperature will automatically lower to level 1 in 10 minutes after using
Others	Deodorization	Photocatalyst-free
	User ID setting	To avoid disturbance from remote controls by multi-user

Name of accessories

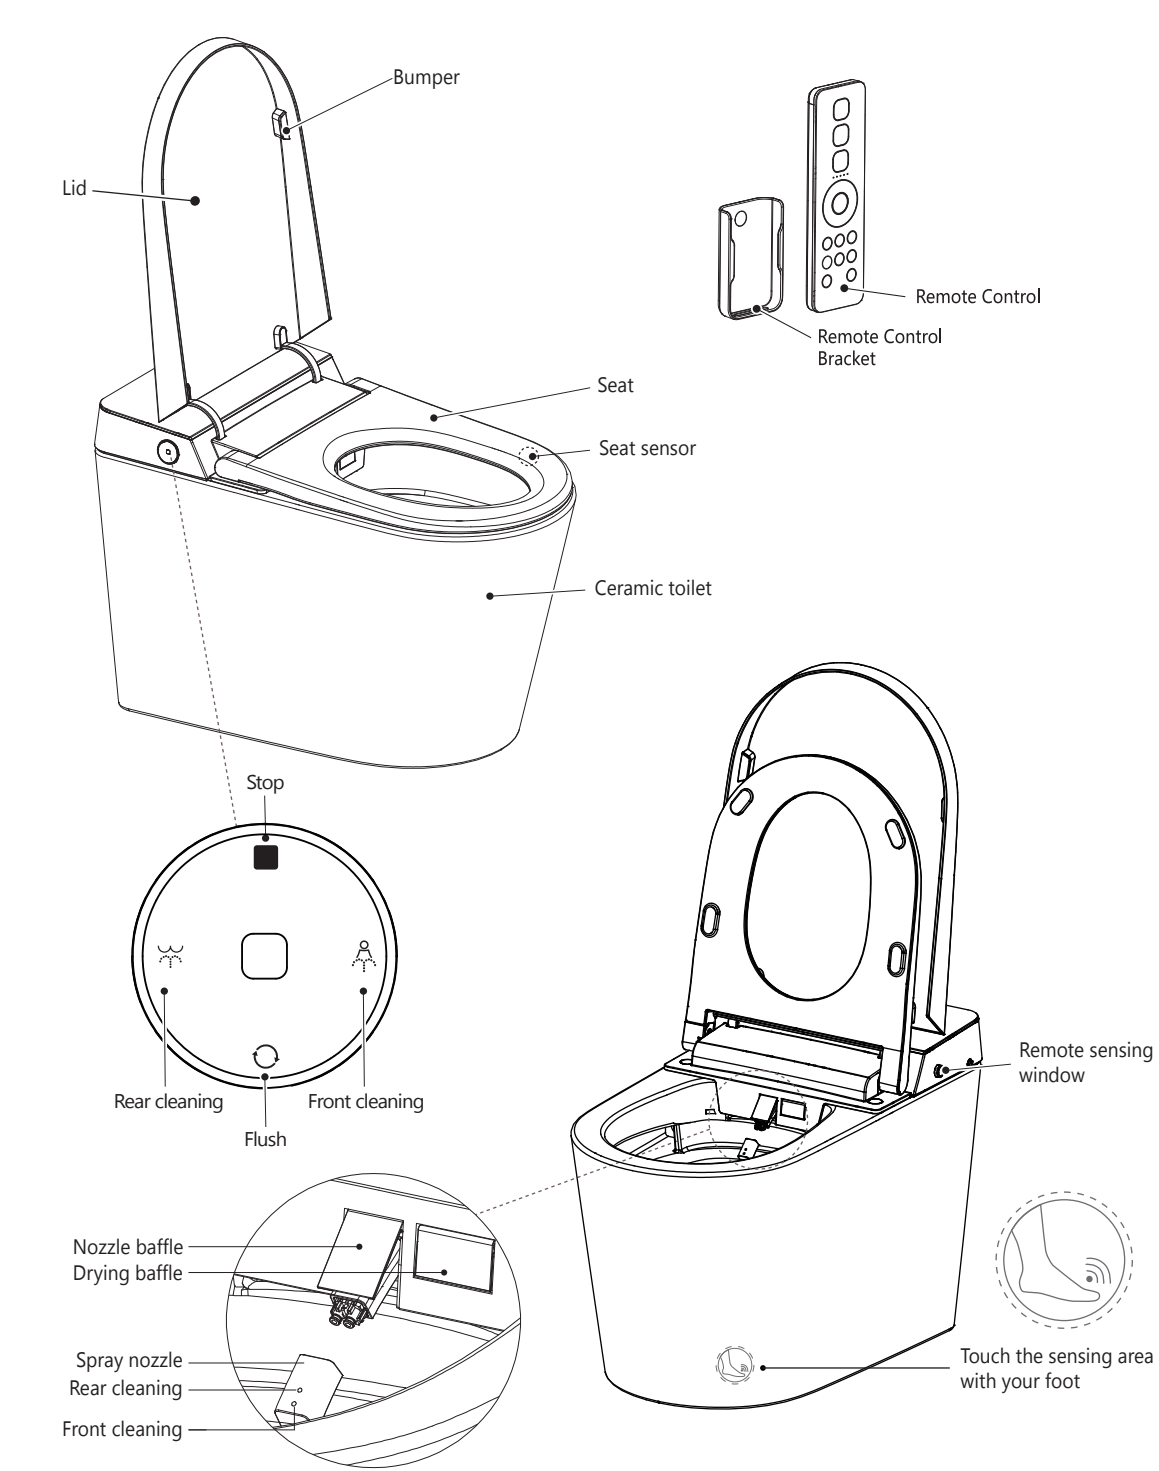


Description of the buttons function

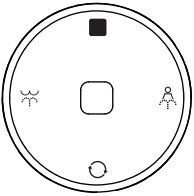	
 Stop	1. Press and hold the "Stop" button on the unit, the unit enters the shutdown mode (white light off), press the "Stop" button again, the unit returns to the working mode (White light normally on).[In the shutdown mode, except for the "Stop" button on the main unit, any button (including the unit and the remote control) is invalid]. 2. When the user is seated, press the "Stop" button on the main unit to stop the feminine washing, rear washing or drying function. When the user is not seated, press the "Stop" button on the main unit repeatedly. The main unit switches over between working mode (White light normally on) and power save mode (white light flash).
 Rear washing/ Moving washing	1. When people is seated, press "Rear washing" button, to wash the rear portion of body; Press "Rear washing" button repeatedly, then turn on/off mobile function; Press "Stop" button to stop. When one circle cleaning is finished and the body remains seated, the dry function will be automatically turn on and will stop after one cycle. 2. When no one is seated, press "Rear washing" button, the wand will stretch out ,people can wash the nozzle and wand manually, press "Stop" button, the wand will retracts.
 Front washing/ Moving washing	When people is seated, press "Front washing" button, to wash the front portion of body; Press "Front washing" button repeatedly, then turn on/off mobile function; Press "stop" button to stop. When one circle cleaning is finished and the body remains seated, the dry function will be automatically turn on and will stop after one cycle.
 Flush	1. When the user is seated, long press the "Flush" button on the main unit to turn on the drying function. After drying for one cycle, it will stop automatically. During the drying process, press the "Stop" button to stop the drying function. 2. In the non-off mode, short press the "Flush" button on the main unit to turn on the flush function. [Under the rear wash or the femail wash function, the flush function is invalid; when the nozzle is manually cleaned, the flush function is activated after the nozzle is fully extended and retracted into position].

Tips: The default setting of all function is on middle level, after using controller,shift to the level setted last time.

Remote control illustration

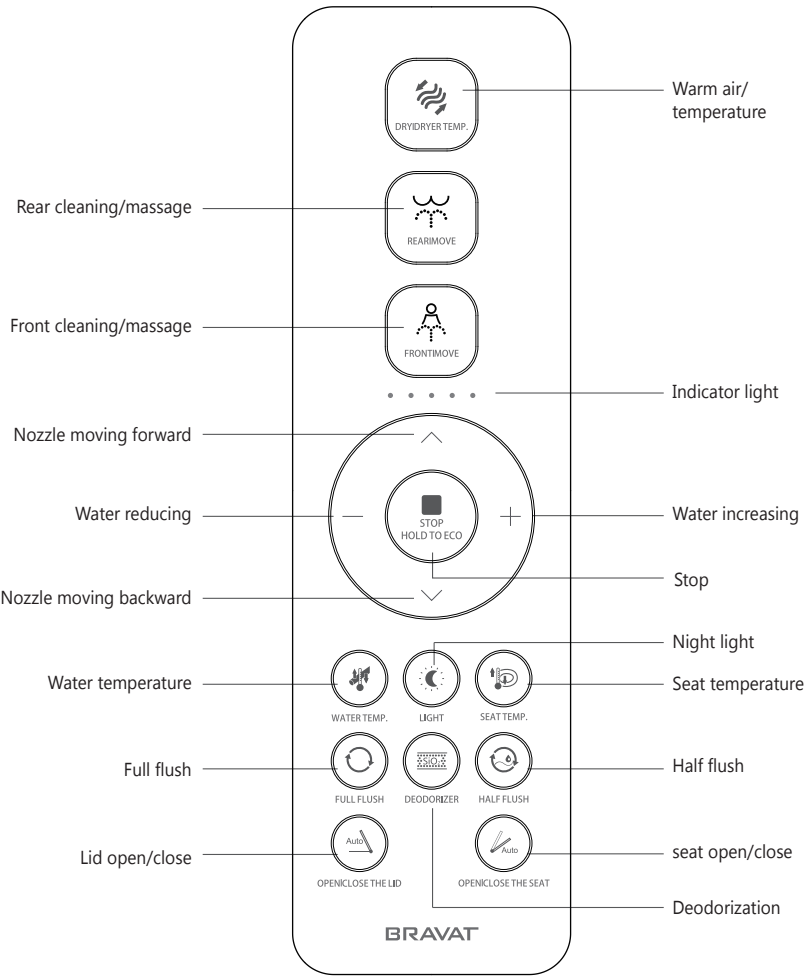


Notice :

- The body should touch the seat and the buzzer rings "BEEP", which means functions of front cleaning, rear cleaning and drying are in operation.
- Please stay backward when sitting on the seat. So that the cleansing position can be easily aligned and there will be no splash.
- The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press "STOP" button before standing up.


Remote control illustration

Rear/Front cleaning

Press "REAR/MOVE" button, the indicator light is on showing current water temperature level, it starts rear cleaning; Press again "REAR/MOVE" button to shift to massage cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses "STOP" button.

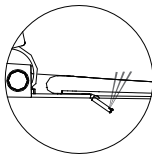

Press "FRONT/MOVE" button, the indicator light is on showing current water temperature level, it starts front cleaning; Press again "FRONT/MOVE" button to shift to massage cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses "STOP" button.

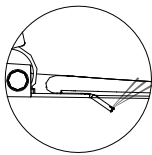


Warm air | air temperature

Press the "DRY/DRYER TEMP" button, the indicator light will light up, showing the current air temperature range. The warm air will stop automatically after a cycle or after the human body leaves the seat.


In the process of warm air, press the "DRY/DRYER TEMP" button to adjust the air temperature, and the indicator light will light up to display the wind temperature range. When the indicator light is not on, it is 0 grade (normal temperature range), and the range adjustment mode is 0-5 grade in turn.

○○○○○ Normal ●○○○○ Grade 1 ●●○○○ Grade 2 ●●●○○ Grade 3 ●●●●○ Grade 4 ●●●●● Grade 5
 temperature

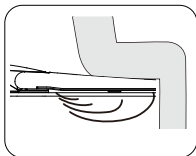


Water volume adjustment

During front/rear cleaning, Presss "+" or "-" button when it is under function of rear cleaing or front cleaning, the indicator light will be on showing current water volume level, adjust water volume by 3 levels.

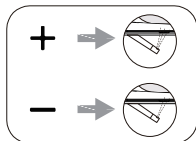

Spray nozzle position adjustment


During front/rear cleaning, Presss "Λ" or "V" button when it is under function of rear cleaing or front cleaning, the indicator light will be on showing current nozzle position, adjust nozzle position by 5 levels.

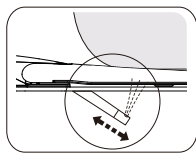

Water temperature adjustment

Short press the "WATER TEMP" button to adjust the water temperature. The indicator will show the water temperature level if it's on. When the indicator is off, the water level is 0. Short press this button to adjust water temperature level from 0 to 5 in cycle.

○○○○○ Normal ●○○○○ Grade 1 ●●○○○ Grade 2 ●●●○○ Grade 3 ●●●●○ Grade 4 ●●●●● Grade 5
 temperature

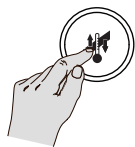

Seat temperature adjustment

Short press the "SEAT TEMP" button to adjust the seat temperature. The indicator will show the seat temperature level if it's on. When the indicator is off, the seat level is 0. Short press this button to adjust seat temperature level from 0 to 5 in cycle.

○○○○○ Normal ●○○○○ Grade 1 ●●○○○ Grade 2 ●●●○○ Grade 3 ●●●●○ Grade 4 ●●●●● Grade 5
 temperature



Night light

Short press "LIGHT" button to turn on/turn off night light, long press "LIGHT" button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, short press "LIGHT" button to exit intelligent mode. (Night light factory default setting is intelligent mode)




Deodorization

Short press "Deodorization" button to turn on/off auto deodorization function. While the auto deodorization function is on, when it's detected that the user is seated, it'll start deodorizing and stops when user leaves. When warm air is working on, deodorization function is off. (This function is set to on by default.)



Half flush/ Full flush

- Short press "FULL FLUSH" button, the toilet starts full flushing.
- Short press "HALF FLUSH" button, the toilet starts half flushing.
- Long press "FULL FLUSH" button to turn on/off auto flush function. When the auto flush function is on, When seat off, the full and half flushing functions will be carried on.

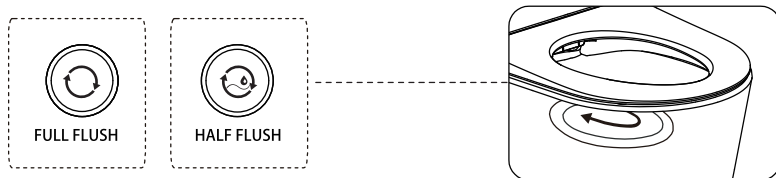

Auto lid open/close

- Press "Lid open/close" button to open/close lid.
- Press "Seat open/close" button to open/close seat.
- Long press "Lid open/close" button to turn on/off auto lid open/close function. (This function is set to off by default and needs to be turn on by users if it's needed.)



Foot sense Switch

Long press "HALF FLUSH" button to turn the foot sense function on or off. In the seated status, foot sense function is invalid.

Remote control illustration

Energy saver

Keep pressing "STOP" button to enter energy saving mode. Keep pressing "STOP" button again to exit energy saving mode.

Energy saving

Under energy saving mode, seat temperature is low (level 1) to achieve energy saving. (Note: If the seat temperature before energy saving is neutral, keep the neutral after energy saving)

Remark

Energy saving mode will be suspended and goes to function mode if someone uses the seat in the middle of energy saving. The seat starts to heat immediately (without closing the seat temperature), and the energy saving mode is restored after the human body leaves the seat.

Quiet mode

Press and hold the "STOP" button and press the "FRONT/MOVE" button to turn on/off quite mode.

Automatic pre-wetting button

Press and hold the "STOP" button and press the "FULL FLUSH" button to turn on or off the automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function is performed when the user is detected to be seated.

User Code

Users need to set user code when using multiple products to prevent remote control from interfering with each other. When making the adjustment, other products need to be powered off. Under the condition that the product is not powered, press the remote control code combination button (first press and hold the "stop" button, then press the "Rear washing" button). The indicator light will light up and flash, and it enters the matching mode.

Use the Pressure "+" and "-" buttons to select User 1-9 (as shown in the figure below). The indicator light displays the corresponding user code and flashes. And then press the code combination button again to get the matching finished. (Tips: if the host computer is rebooted or the remote control battery is replaced, it needs to be matched again. After entering the matching mode, there is no operation within 10 seconds, and it will exit the matching mode by itself.)


●○○○○	○●○○○	○○●○○	○○○●○	○○○○●	●●○○○
User 1	User 2	User 3	User 4	User 5	User 6
○●●○○	○○●●○	○○○●●			
User 7	User 8	User 9			

Tips:

- The buzzer will sound "BEEP" when the user presses one button which means the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during wand's spray operation, the wand cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.


Auto lid open/close

If you purchase the intelligent toilet with auto lid open/close function, the product can achieve the function of auto lid open/close. is on closed situation, so please start the auto lid open/close function by using remote controller.

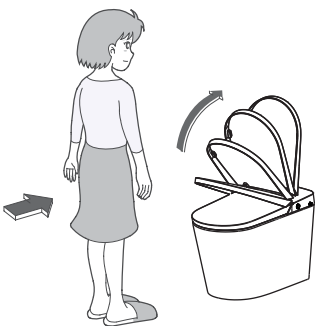


1.Approaching the toilet

1.When approaching the toilet, the mechanism will detect the movement and the cover will open automatically.

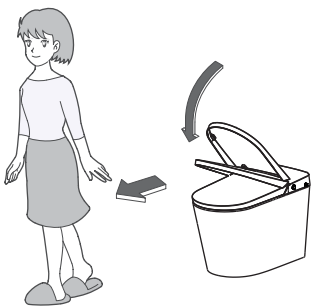

2.Leaving the toilet

After about 180 seconds when leaving the toilet, the cover will close automatically.

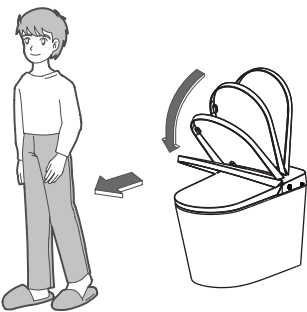

3.Men urinate when standing

- 1.Use the remote control to open the seat or do it manually.
- 2.After using and leaving the toilet, the toilet cover and seat will automatically close after 180 seconds.

If the toilet is equipped with foot sensor cover-open function, it can make cover auto-open by sensing foot movement.


- 1.When the cover and seat are both closed, put the foot within the sensing area and then cover opens automatically.
- 2.When the cover is open and seat closed, put the foot within the sensing area and then seat opens automatically.
- 3.Under the condition that the seat and cover is open, when foot is touching within the sensing area, it will start up half flushing when the toilet is not flushing. And it will close the seat and cover when the toilet is under flushing.

Cleaning methods

Daily cleaning methods


Main unit maintenance

- Disconnect the power before maintenance.
- Use only a soft, damp cloth to clean. Avoid using harsh chemicals.
- Safety self- inspection
After cleaning, re-connect the toilet with the power supply.

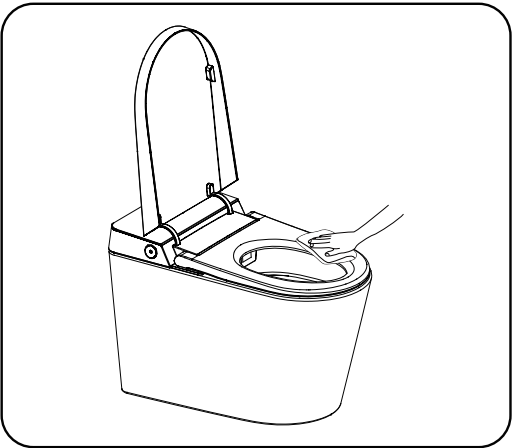


Spray nozzle maintenance

- While not sitting on the unit, short press the "REAR/MOVE" Button on the main unit, the spray nozzle will extend outward and water will flow out.
- The spray nozzle can be removed and cleaned separately. After the spray nozzle extends outward, hold the nozzle housing with one hand, remove the nozzle itself by gently pulling it towards with the other hand.

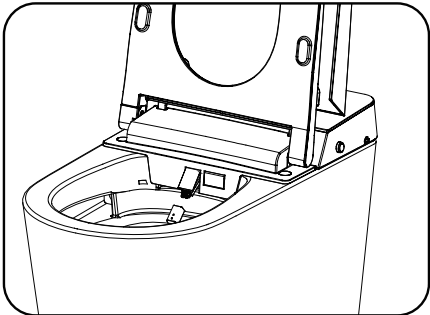

- Use only a soft, damp cloth to clean. Avoid using harsh chemicals. DO NOT pull the nozzle housing outward or inward to prevent damage of the nozzle and motor.

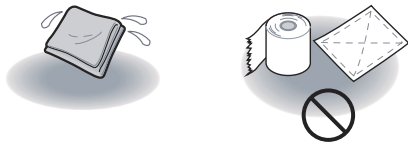


- Once cleaning is completed, re-install the nozzle to the nozzle housing. Press the "STOP" button on the main unit/remote control to return the nozzle rod to its normal position.

Maintenance of filter net


- Time for maintenance: It is under normal water pressure but poor flush performance occurs.

1 Turn off power and the angle valve


2 Unscrew angle valve nut

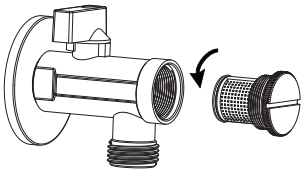

3 Remove filter net

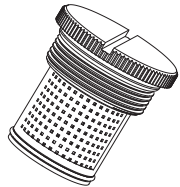

4 Use the brush to clean filter net

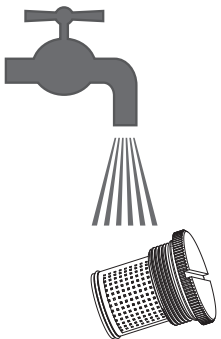


5 Reinstall filter and angle valve nut, turn on the angle valve and connect power, then it can work normally after self inspection.

Emergency Troubleshooting

◆ Water and power failure


1 No power

- Activate flushing by pressing flush button manually for 3 second around. (This function is optional, please install the battery before use when it is available.)

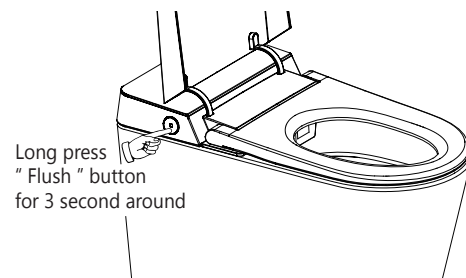


2 No water supply

- Put around 8L water into a barrel and flush the bowl of ceramic.
- Note: Avoid water spilling from bowl.

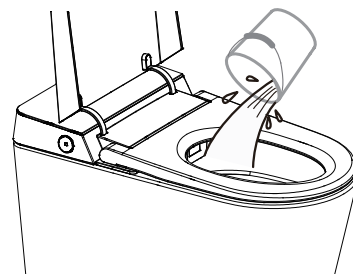

◆ Failure of remote control

1 Use the buttons on the main unit to operate.

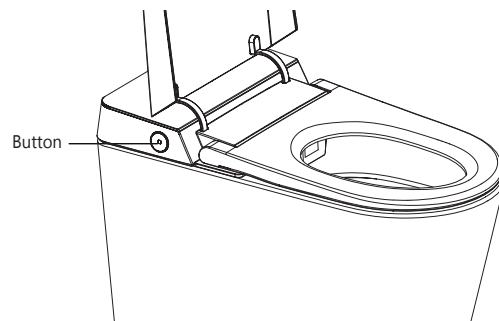

2 Battery replacement

- Remove the remote control from rack.
- Open the battery cover and replace the battery.
- Put the remote control back on the rack.


Tips: When the battery is replaced, the setting of automatic function and power saving device will be cancelled and need to be reset.

3 Bidet seat battery installation and replacement

- Pull out the power plug and turn off the angle valve;
- Fully open the seat and cover, remove decorative caps, screws and washers.
- Pull up the bidet seat slightly with both hands in the vertical direction, so that the back end is separated from the ceramic positioning rod. (It is normal to have a "click" sound during the pulling process.)
- Pull out the plug-in connecting line, loosen the water inlet pipe and remove the whole seat and cover.
- Place the bidet seat flat on the workbench with the bottom facing up. (Please use a blanket or other soft material to cushion the bidet seat to avoid scratching.)
- Remove the battery box cover from the bottom to install or replace the battery.
- Re-install the bidet seat and turn on the angle valve and power.

Reminder:

1. It is recommended to ask professional personnel to operate!
2. It is recommended to use high quality 6LR61 9V battery.
3. There is no battery installed in the bidet seat in the configuration. It should be purchased by the customer before installation.
4. It is recommended to replace the battery every two years, otherwise there may be a risk of leakage.

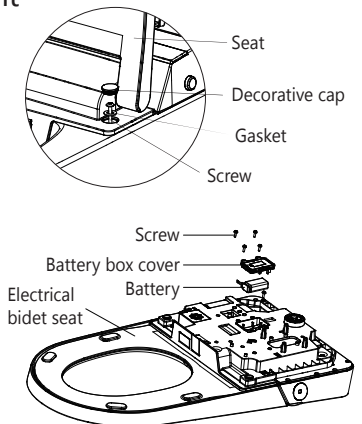

◆ When the product is left unused for long time

- Especially in winter when no one at home for a long time, please drain out the water inside tank and pipe to prevent freezing.

To discharge water

1. Drain out the water inside tank

- Activate flushing, and then turn off angle valve to prevent water inlet.

2. Unplug and cut off the electricity

3. Drain out the water inside pipe


- Unscrew the hose connector off angle valve, drain the water in the pipe and reinstall.

4. Handle the remaining water in bowl

- It is suggested to put some antifreeze into water inside the bowl.



Note : Before water discharging, the power must be cut off!

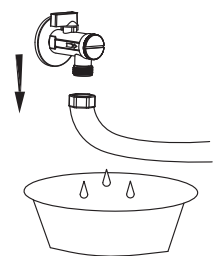

Troubleshooting Guide

Problem	Cause	Solution
No flushing	Water supply hose buckling causes block	Solve the buckling
	Fill valve is off	Turn on the fill valve
Poor flushing	Water supply is cut off	Connect water supply and wait for the water
	Water supply hose buckling auses partial block	Solve the buckling
Low water temperature	Fill valve is not fully turned on	Turn on the fill valve fully
	Filter is dirty and causes block	Clean the filter
low seat temperature	The water temperature is settetd on normal temperature level	Reset the water temperature
	The seat temperature is settetd on normal temperature level	Reset the seat temperature
low wind temperature	In standby mode	Switch to functional mode and use it after 3 minutes of use
	The wind temperature is settetd on normal temperature level	Reset the wind temperature
No wind out	In standby mode or power save mode	Shift to function mode to use dry function
	Power off	Push back the wand lightly and wait for the power
spray wand cannot retracted	Get stuck by impurities	Clear away the impurities
	Power off	Push back the wand lightly and wait for the power
Spray wand cannot stretch out	Do not sit in sensing area	Sit right in the sensing area
	Reverse the polarity of battery	Reload the battery
Remote control cannot display	Batteries cannot supply enough power	Replace new batteries
	User doesn't reach the sensing area in seat	Adjust to reach the sensing area
Malfunction of deodorization	Deodorization function keeps working after user leaves	It's a normal phenomenon if deodorization function keeps working after user leaves to ensure eliminating smell entirely
	battery out of power	Take E bidet off of the toilet, open the battery box lid from the bottom of E bidet and replace the battery
When power is off, there will be no flush by pressing button		
 Caution	If the problems cannot be solved as per above methods, please shut-off the power, and contact service providers for maintenance. If the leakage circuit breacker often trips off, it means the products has electricity leakage, so please shut-off the power,and contact service provider for maintenance.	

Technical data

Model		C21295W-3-VP
Rated pressure		220V/50Hz
Rated power		1070W It is the average power consumed when this product is energized and started initially, sets the water pressure, seat temperature and water temperature to the highest level in sequence, then immediately starts the rear washing and continues to work stably for one cleaning cycle, with the ambient temperature of 23 ℃ , the hydrostatic pressure of 0.18MPa±0.02MPa and the inlet water temperature of 15 ℃ .
Electrical wire		length is about 1.5m
Cleaning device	Heating mode	Instant heated
	Heating power	1600W
	Water temperature	6 adjustable temperature settings
	Water volume	3 adjustable water volume settings
	Cleaning function	Rear cleaning/Moving washing Front cleaning/Moving washing
	Nozzle position	5 adjustable nozzle positions
	Anti-fouling device	Automatic cleansing nozzle, Anti-syphon device, Anti-backflow device, Filter device
	Water pressure protector	Pressure stabilizer, Automatic pressure discharging
	Safety device	Thermal fuse, Water temperature senor, Ground protection, Thermostat,Over temperature protection , Leakage protection plug
Drying device	Warm air volume	Over 0.2m³/min
	Warm wind temperature	6 adjustable temperature settings (Neutral level included)
	Heating power	250W
	Safety device	Thermal fuse, Temperature senor, Thermostat
Heated seat	Surface temperature	6 adjustable temperature settings. (Neutral level included)
	Heating power	50W
	Heated burning protection	The seat temperature will automatically lower to level 1 in 10 minutes after using
	Safety device	Sensed area, Temperature senor, Thermal fuse, Bimetal thermostat, Leakage protection plug


Technical data

Caring device	Night light assembly	Intelligent / normally on / normally off
	Automatic flushing	Toilet will automatically flush as user walks away from bowl
	User ID setting	Nine kinds of User ID settings
	Foot-sensing flushing function	Cover auto-open by sensing foot movement or autoflushing by turning seat over
	Power off flush	Toilet will washed manually after power failure
Cover open function		Cover auto-open
Flush volume		4.8L(full flush 6.0L/half flush4.2L)
Flushing mode		Siphonic jet
Rough-in distance		305mm
Outlet outside diameter		≤ 100mm
Drainage method		Down-drain
Water pressure range		0.09MPa (dynamic water pressure, flow rate 15.0L/min or more)--0.8MPa (static water pressure)
Overall unit Waterproof		IPX4
Deodorization		Photocatalyst-free Deodorization
Antibacterial position		Seat, Spray nozzle
Product size		700mm*393mm*476mm
Product weight		44kg

Pre-installation confirmation


The installation of the product needs to meet the requirements of PCA.

Technical drawing

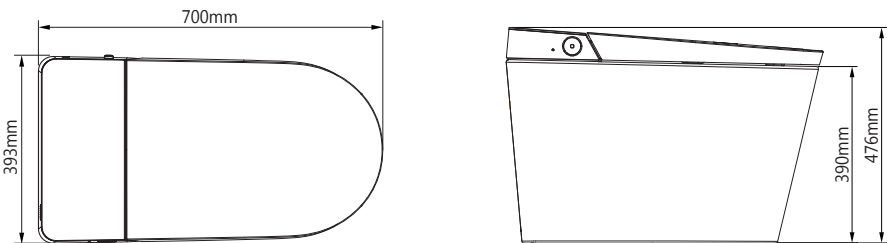

The product drawing is for reference only, and we reserve the right to modify the appearance of the product.


List of materials

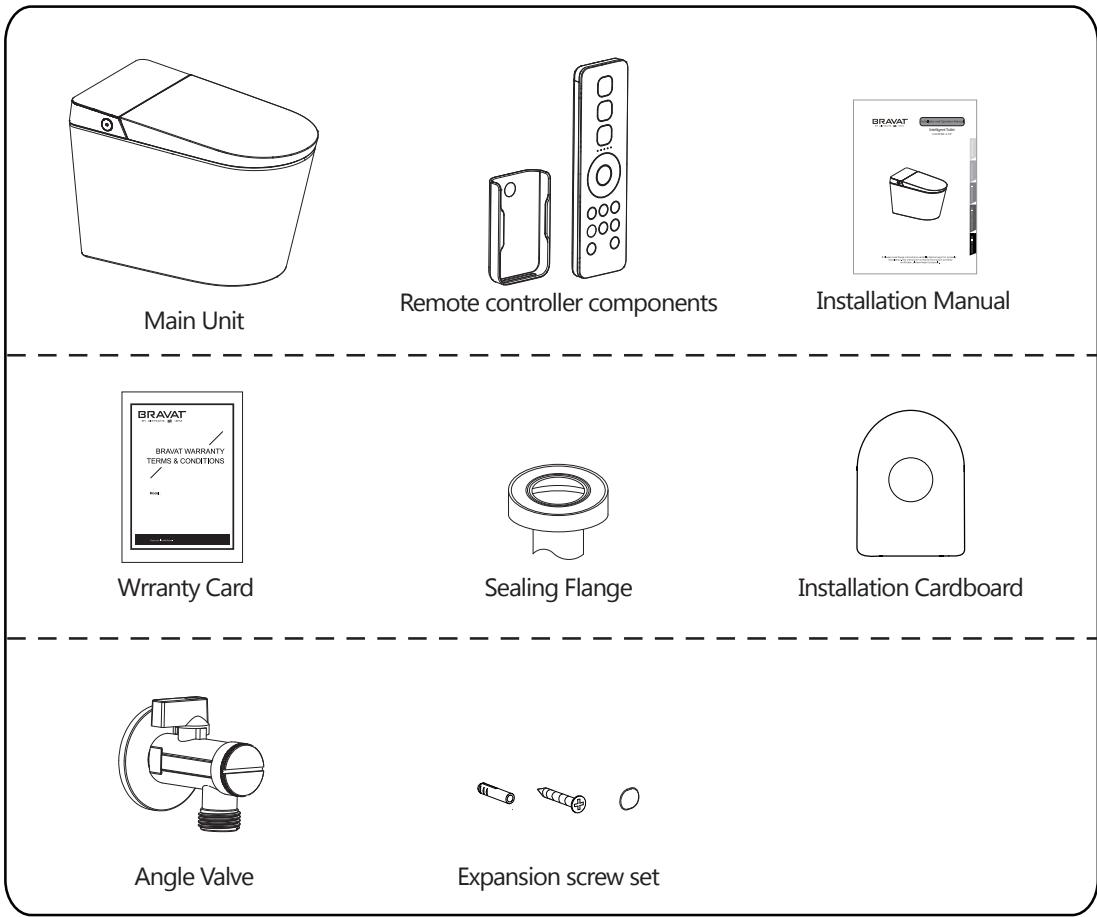

Installation of ceramic toilet


1 Precaution before installing

- Minimum dynamic working water pressure: 0.09MPa or more (15.0L/min or more), failure to meet this pressure will not achieve the best flushing effect.
- Remark: Apply the methods below if you don't have water pressure testing device.

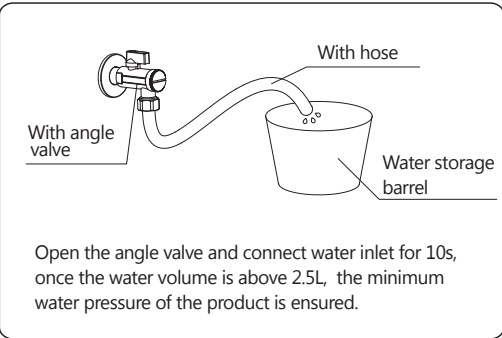


2 Installation of mating angle valve

- Draw drain outlet centerline on the floor; Install angle valve at proper position on wall according to dimension of toilet.

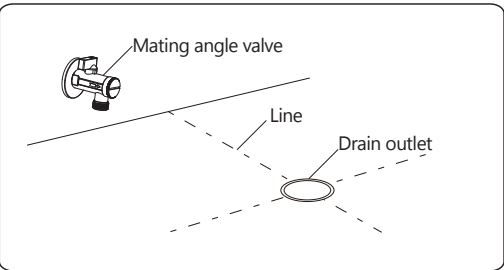


3 Cardboard installation

- Align cardboard with the centerline of drain outlet;
- Draw contour line according to cardboard.

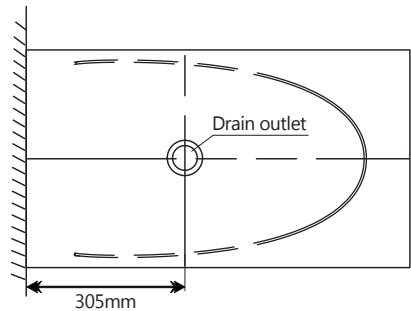


4 Hose

- Connect the water inlet and angle valve of the toilet with the matching hose and tighten it.

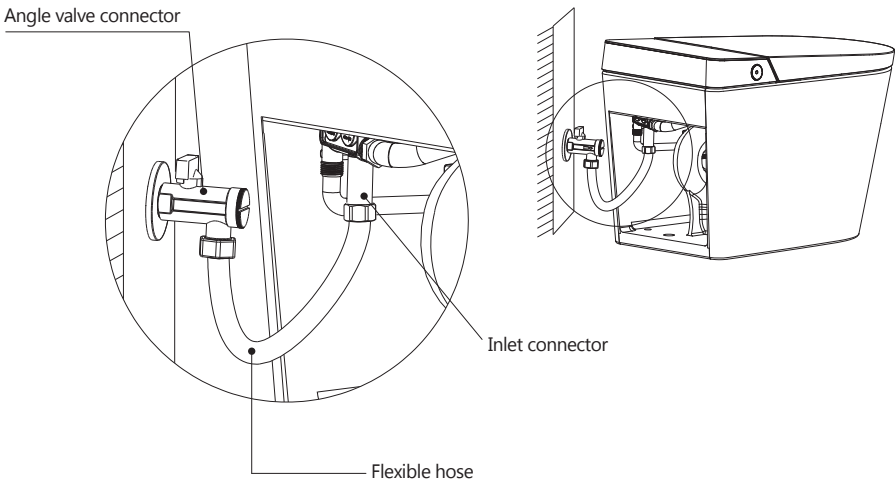

5 Ceramic toilet installation


- Install sealing flange into drain outlet;
- Install ceramic toilet on corresponding position according to contour line.

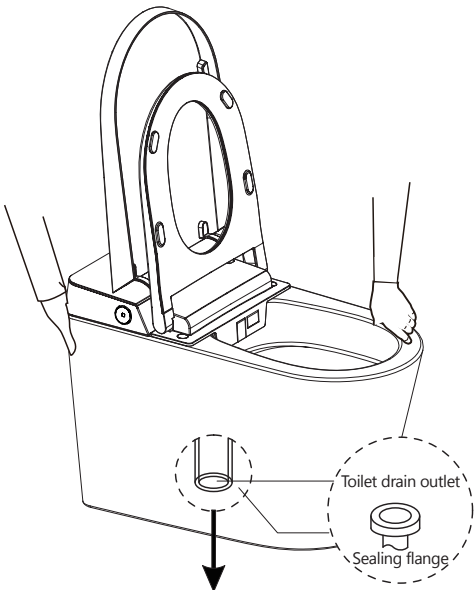

Tips: The toilet is heavy, and it needs to open the seat cover to carry it by two people.

6 Glass cement application

- Apply high quality mildew glass glue around the lower edge of the toilet.

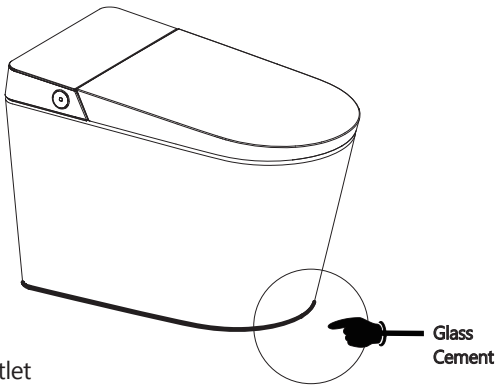

Tips: Please clean the drain outlet; Please make sure ceramic toilet outlet sits perfectly on drain outlet.


Installation of ceramic toilet

Previous preparation

7 Remote control installation


• Installation method 1:

- 1、Drill a 6 mm diameter hole in the wall to a depth of about 35 mm.
- 2、Tear off the double-sided adhesive sticker on the back of the hanger.
- 3、Install the expansion pipe into the wall hole, and align it with the hanger hole. Attach the double-sided adhesive sticker on the back of the hanger to the wall, lock the screw, and tear off the double-sided adhesive sticker on the back of the patch and stick it on.

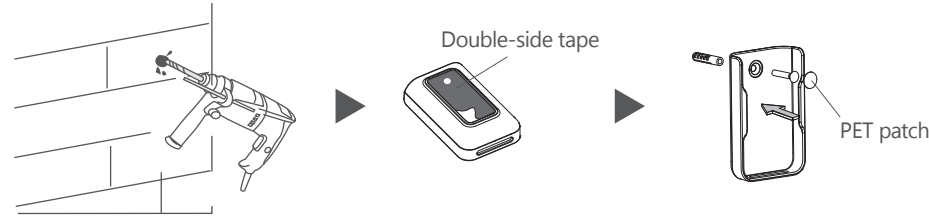


• Installation method 2:

- 1、Clean and wipe dry the pre- installed area of the remote control hanger on the wall.
- 2、Tear off the double-sided adhesive sticker on the back of the hanger.
- 3、Stick to the wall vertically, tear off the double-sided adhesive sticker on the back of the patch and stick it on.

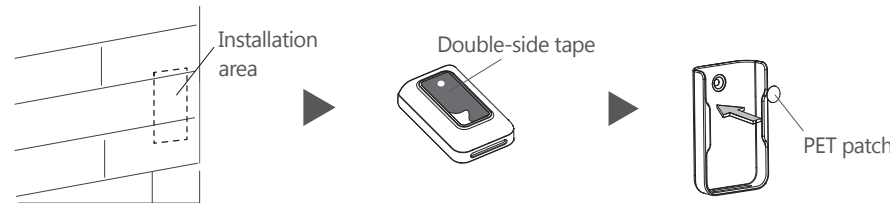

• Batter installation:

- 1、Install the new battery into the remote control and cover the battery cover.
- 2、Put the remote control in the hanger.

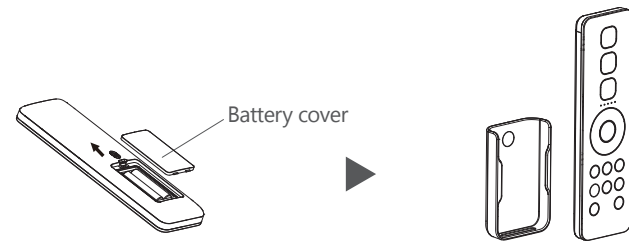


- Notice:
- 1、 When determining the installation position, it is necessary to ensure that the remote control can be reached by hand when the person is sitting on the ring.
 - 2、 It is forbidden to install and use the product in the bathroom and other wet places. And do not put it in the place where it is easy to be drenched by water.

1. Turn on the angle valve

Check thread connection, make sure no leakage is found,unscrew angle valve anticlockwise to maximum opening.


Tips: When opening for the first time, the angle valve handle has a larger torque.

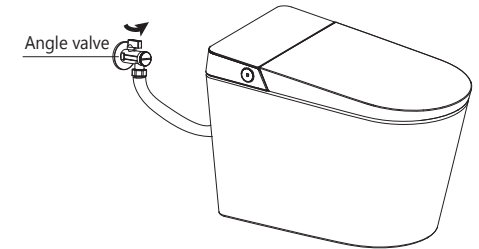

2.Power Connection

Insert power line leakage protection plug into the power socket, press the reset switch, two indicator lights on indicating that the power is on.

Tips: Press electric leakage test button prior to usage, the reset switch pops up indicating that the leakage protection function is normal.Press the TEST button (then RESET button) every month to assure proper operation.

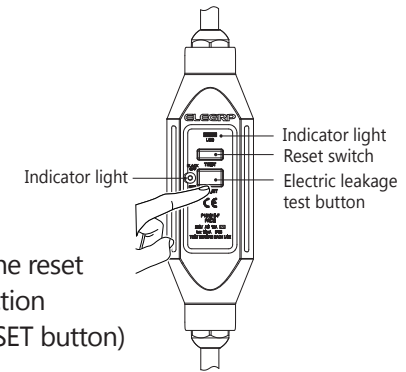

3. Safety self-inspection

- 1.When the host buzzer beeps, the button lights up white, and all the indicator icons on the display light up to start the self-inspection;
- 2.The host buzzer will beep again. After the self-inspections is completed, the button will light white.
- 3.Turn on the function and use it normally.

